

# *ZyAIR G-200*

*Wireless LAN USB Adapter*

## *Quick Installation Guide*

Version 1.00  
December 2003



## Procedure to View a Product's Certification(s)

1. Go to [www.zyxel.com](http://www.zyxel.com)
2. Select your product from the drop-down list box on the ZyXEL home page to go to that product's page.
3. Select the certification you wish to view from this page.

## 1. Installation Requirements

Before installation, make sure you have the following requirements.

- Pentium II 300MHz or above
- A minimum of 6 MB available hard disk space
- A minimum of 32 MB RAM
- A CD-ROM drive
- A computer with an available USB port
- Windows 2000/XP

## 2. ZyAIR Utility and Hardware Installation

The installation procedures are similar for all supported Windows versions. Windows XP screen shots are shown unless otherwise specified.

**DO NOT connect the ZyAIR at this point.**

1. Insert the support CD into the CD-ROM drive on your computer. The CD auto runs. Otherwise, locate and double-click on **setup.exe**. A Welcome screen displays. Click **Next**.


2. Click **Next** to accept the default file location or click **Browse** to select an alternate folder.
3. Click **Finish** to restart the computer.
4. With a USB cable, connect the ZyAIR to an available USB port on the computer. The **PWR** LED turns on if the ZyAIR is properly connected.
5. Windows 2000: If a warning window displays, click **Yes**.
6. Windows XP: A **Found New Hardware Wizard** window displays. Select **Install the software automatically (recommended)** and click **Next**.
7. Windows XP: If a warning window displays, click **Continue Anyway**. Then click **Finish** to complete the installation process.

After you install the ZyAIR Utility and connect the ZyAIR, an icon appears in the system tray.



**If the ZyAIR Utility icon displays, the ZyAIR is installed properly. Refer to the *User's Guide* to configure the ZyAIR.**

## LED Display

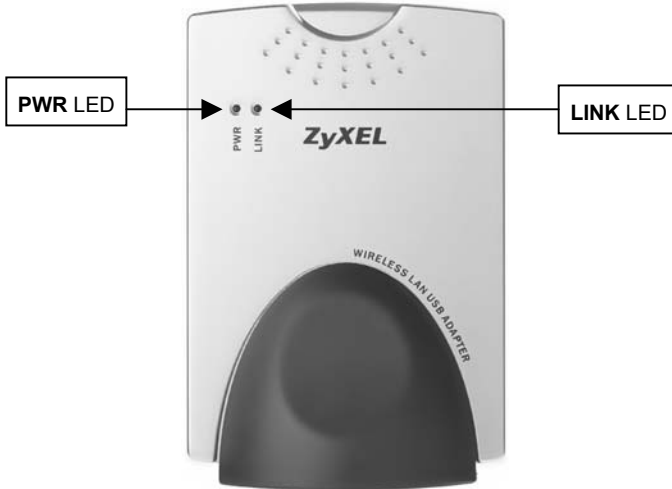

The following table describes the LEDs on the ZyAIR.

LED	COLOR	STATUS	DESCRIPTION
PWR	Green	On	The ZyAIR is receiving power.
		Off	The ZyAIR is not receiving power.
LINK	Green	On	The ZyAIR has a connection to a wireless LAN.
		Blinking	The ZyAIR is receiving or sending data.
		Off	The ZyAIR is not connected to a wireless LAN.

## Troubleshooting

PROBLEM	CORRECTIVE ACTION
Windows does not auto-detect the ZyAIR.	Make sure the ZyAIR is connected to the computer USB port properly and then restart your computer. Check the LEDs on the ZyAIR.
	Perform a hardware scan by clicking <b>Start, Settings, Control Panel</b> and double-clicking <b>Add/Remove Hardware</b> . (Steps may vary depending on the version of Windows). Follow the on-screen instructions to search for the ZyAIR and install the driver.
	Check for possible hardware conflicts. In Windows, click <b>Start, Settings, Control Panel, System, Hardware</b> and then click <b>Device Manager</b> . Verify the status of the ZyAIR under <b>Network Adapter</b> . (Steps may vary depending on the version of Windows).
	Reinstall the driver/utility.
	Install the ZyAIR in another computer. If the error persists, you may have a hardware problem. In this case, you should contact your local vendor.